
## **BCM** Functions

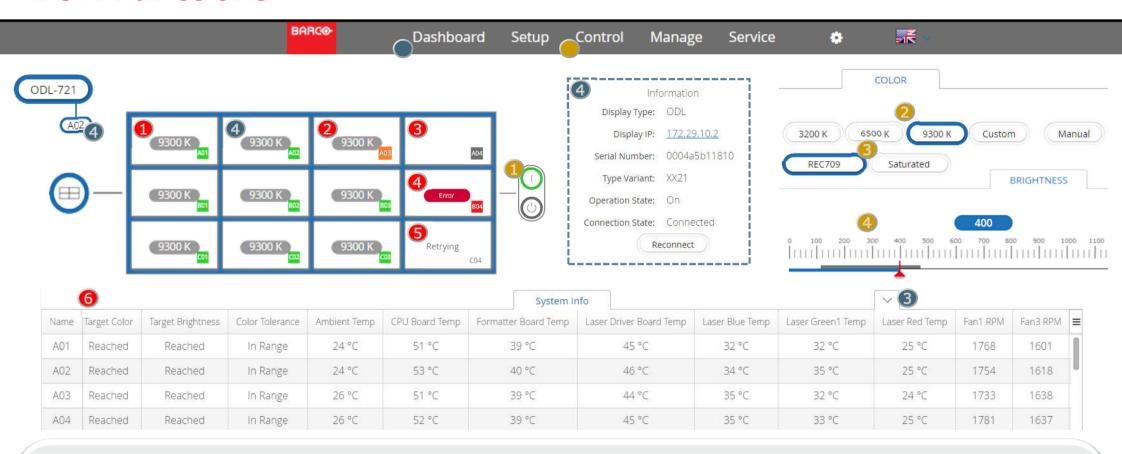

### DashBoard:

- 1 The BCM client is opened from the BCMC webpage. (see other side) Some users also prefer to have a shortcut saved to their browsers favorites list for easy access.
- The Client opens on the Dashboard page, where you have the status of the entire wall, represented in one single view.
- 3 At the bottom of the page there, you can open the System info for an overview of wall properties
- 4 Click any of the squares to see more detailed properties for the respective projector.

#### Control:

- 1 Power: use this control to switch the entire wall between On and Idle status
- 2 Advised color presets are 6500K (Warm white) or 9300K (Cool white).
- 3 Below are color gamuts. REC709 conforms to TV standard, while Saturated takes full advantage of all the projectors colors.
- 4 Brightness: can be selected within the range of the grey bar. Minimum and maximum depend on the selected color and gamut.

  (Tiling should not change)

### **Wall/projector Status:**

- Green: Normal operation
- Orange: Warning
- Grey: Unit is in Standby status
- A Red: Error
- **5** Transparent: Status is unknown
- 6 Properties to check in case of Warning or Error are related color target (reached/in range),

temperatures and fan RPMs. Compare with normal

functioning units in the wall.

If ambient temperature is normal, check the dust filter. (See other side)



# **ODL** wall hardware



### The BCMC Server and network:

- ① Check BCM server is active. (The green led is on continuously.)
- 2 Check all network cables are connected and receiving transmitting.
- You can connect to the BCMC Admin webpage by connecting to the wall switch and going to 172.29.1.1
- Log in as admin, psswrd: barco

- 3 Try a Reboot for a full restart of the BCMC to potentially solve network issues. (getting or assigning DHCP IP addresses.)
- 4 Download the Log files, if advanced support from Barco is needed.

### The ODL laser modules

- 1 The ODL uses laser light, which ensures a high brightness. It is perfectly safe for the user on the front side.
- 2 If you need to open the back cover, switch the wall to standby, or lower the brightness

### The projector module

- Ocooling issues can be linked to reduced airflow by polluted air filters. Replace the filters if dirty. Filters can be replaced without any use of tools.
- 2 Opening the module does require tools and should only be done by trained personnel.
- 3 You can check the mains switches whether the unit is still connected and powered on...

